

# USER INSTRUCTIONS

***prima***

BUILT UNDER  
LARDER FRIDGE/ FREEZER

**LPR112A1**

**LPR162A1**



## DECLARATION OF CONFORMITY

The manufacturer of the product/s described herein, to which this description refers, declares on its sole responsibility that the product/s meet the relevant fundamental safety, health and protection requirements of the relevant EU guidelines and that the corresponding test reports are available for examination by the relevant authorities and can be requested from the seller of the appliance, especially with regard to CE Declaration of Conformity issued by the manufacturer or with the manufacturer's approval.

Moreover, the manufacturer declares that the parts of the appliance described in this user manual, which come into contact with fresh food, do not contain any toxic substances.

## **Your 1<sup>st</sup> Year Guarantee**

Your appliance carries a 12 months parts and labour warranty. To fulfil the conditions of your guarantee, the appliance must be correctly installed and operated, in accordance with the instructions, and only be used for normal domestic purposes.

Please note that the guarantee, and service availability, only apply to the United Kingdom.

## **Customer Service**

In case of difficulty please call the Customer Service Helpline on

0844 557 1717

Please ensure you have the model and serial number to hand when calling customer service. Please keep your receipt or invoice in a safe place as they will be required as proof of date of purchase.

**Dear customer**

Thank you for purchasing this high quality product, designed and manufactured to satisfy all up-to-date requirements and guarantee prolonged lifetime in keeping with all your expectations.

## **CONTENTS**

<b>Cautions .....</b>	<b>page 5</b>
<b>Warnings and important information .....</b>	<b>page 7</b>
<b>Installation .....</b>	<b>page 8</b>
<b>Operation and functions .....</b>	<b>page 9</b>
<b>How to dispose of the packing material .....</b>	<b>page 12</b>

## Electrical Safety Information

### WARNING !


**THIS APPLIANCE MUST BE EARTHED.**

**IF THE MAINS LEAD OF THE APPLIANCE IS FITTED WITH A PLUG:**

### FUSE REPLACEMENT

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, to change a fuse in this type of plug use a A.S.T.A. approved fuse to BS 1362 type and proceed as follow:

1. Remove the fuse cover (**A**)
2. Remove the fuse (**B**)
3. Fit replacement fuse into plug
4. Refit the fuse cover

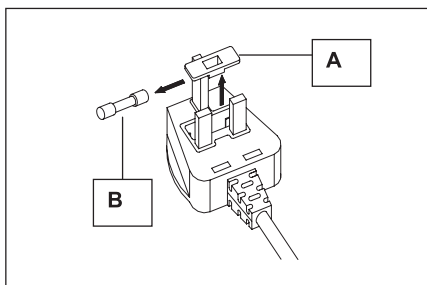

### IMPORTANT:


The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacements are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.


### CONNECTION TO A REWIREABLE PLUG

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere. A suitable alternative plug should then be fitted to the cable.

The wires in this mains lead are coloured in accordance with the following code:

BLUE	"NEUTRAL"	(N)
BROWN	"LIVE"	(L)
YELLOW & GREEN	"EARTH"	(E)

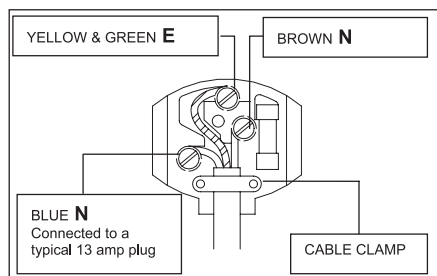

1. The YELLOW & GREEN wire must be connected to the terminal in the plug which is marked with the letter **E**  
or by the Earth symbol   
or coloured **green** or **yellow & green**
2. The BLUE wire must be connected to the terminal which is marked with the letter **N** or coloured **black**
3. The BROWN wire must be connected to the terminal which is marked with the letter **L** or coloured **red**

### **Disposal of your old appliance**

Before disposing of an old appliance, please make sure it's inoperative and safe. Unplug the appliance and remove or destroy all of the springs, latches, or bolt-locks in order to avoid the risk of child entrapment.

It must be noted that the refrigeration system contains insulating gases and refrigerants, which require specialised waste disposal. The valuable materials contained in a refrigerator can be recycled. Contact your local waste disposal centre for proper disposal of an old appliance and contact your local authority or your dealer if you have any questions. Please ensure that the pipe work of your refrigerator does not get damaged prior to being picked up by the relevant waste disposal centre, and contribute to environmental awareness by insisting on an appropriate, anti-pollution method of disposal.

### **Disposal of the packaging of your new appliance**

All the packaging materials employed in the package of your new appliance may be disposed of without any danger to the environment.

The cardboard box may be broken down or cut into smaller pieces and given to a waste paper disposal service. The wrapping foil is made of polyethylene and the polyethylene pads and stuffing contain no fluorochloric hydrocarbon.

All these valuable materials may be taken to a waste collecting centre and used again after adequate recycling.

Consult your local authority for the name and address of the waste materials collecting centres and waste paper disposal services nearest to your house.

### **Safety Instructions and Warnings**

Before turning on the appliance, read the information given in the User's Guide carefully. The User's Guide contains very important observations relating to the assembly, operation and maintenance of the appliance.

Keep the User's Guide in a safe place and remember to hand it over to the subsequent owner, if you ever sell the appliance.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of the following instructions.

\*Damaged appliances are not to be put into operation. In case of doubt, consult your supplier.

## Cautions

- 
- \*Connection and installation of the appliance are to be carried out in strict compliance with the relative instructions set forth in the User's Guide.
  - \*For the purpose of safety, the appliance must be properly grounded in accordance with specifications.
  - \*Always remember to unplug the appliance before cleaning. To disconnect the appliance, pull at the plug itself not the cord.
  - \*Keep alcoholic beverages in airtight bottles or containers and always store in an upright position. In addition, do not store any explosive substances inside the appliance-**Danger of explosion!**
  - \*Do not damage any parts of the appliance that carry refrigerant by piercing or perforating the refrigerant's grooves with sharp or pointed items, crushing or twisting any tubes, or scraping the coatings off the surfaces. If the refrigerant spurts out and gets into eyes, it may result in serious eye injuries.
  - \*Do not obstruct or cover the ventilation grille of the appliance.
  - \*Do not allow children to play with the appliance. Under no circumstances should children be allowed to sit on the drawers or hang onto the door.  
Should you have bought your new fridge / freezer to replace an old appliance, please make sure that all existing latch-or bolt-locks on the old appliance are destroyed, before you dispose of it.  
This will ensure that a child cannot get trapped inside.  
Please have the old appliance ecologically disposed of by a company specialised in environmental protection, since the appliance may contain harmful components in the refrigerant and this must be removed with special equipment. Please check with your dealer or with your local authority.  
Make sure that the refrigerating system which contains the refrigerant, especially the heat exchanger at the back of the appliance, is not damaged during transportation to the disposal or collection site, so that you can be sure that the refrigerant does not leak out. Details concerning the type of refrigerating/isolating agent used can be found on the appliance's rating plate.
  - \*Warning: Keep ventilation openings in the appliance enclosure or in the structure for building in clear of obstruction.
  - \*Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
  - \*Warning: Do not damage the refrigerant circuit.
  - \*Warning: Do not use electrical appliances inside the food storage areas of the appliance.
  - \*It is necessary to have the plug accessible after installation.
  - \*If the supply cord is damaged, it must be replaced by a supply cord or assembly available from the manufacturer or its service agent.
  - \*Connection of power supply and installation should be conducted in accordance with the instructions in the operation manual.
  - \*Only the tools regulated by the manufacturer can be used for defrosting.

## Specifications

- \*This appliance is designed for food refrigeration, ice making and frozen food storage.
- \*It is intended strictly for household use.
- \*The refrigerating circuit is leak-proof.

## WARNINGS AND IMPORTANT INFORMATION

Always keep this instruction booklet together with the appliance for future consultation.

In the event of resale of the appliance or change of ownership, ensure that the instruction booklet is supplied with the appliance so that new owner is fully aware of all instructions and warnings present in this document.

These warnings have been drawn up to ensure the safety of the user and others.

Read all instructions carefully prior to appliance installation and use.

- Disconnect the mains plug before carrying out any cleaning or maintenance operations (e.g. lamp replacement on relevant models).
- This appliance has been designed to be used exclusively by adults.  
Ensure that children do not play near or with the appliance.  
All modifications to the electrical mains to enable appliance installation must be carried out by a qualified technician.
- On completion of installation, check that the appliance is not standing on the power cable.
- Domestic refrigerators and/or freezers are designed exclusively to store and/or freeze foodstuffs.
- During normal operation, the condenser and compressor, located at the rear of the appliance can reach high temperatures; ensure that installation is carried out according to the instructions contained in this booklet. Insufficient ventilation will impair operation and damage the appliance. Never cover or obstruct the ventilation slats on the appliance.
- Never allow children to play with the appliance. Children must never be allowed to sit on the drawers or hang on the appliance doors.
- Never use the base, drawers, doors etc. to stand on or as supports.

- If the appliance is transported in a horizontal position, the oil in the compressor may flow into the refrigerant circuit.
- Leave the appliance standing vertically for at least two hours before switching it on, to ensure that oil flows back into the compressor.
- All refrigerators and freezers have surfaces that are subject to the formation of frost. Depending on the model, this frost can be removed automatically (automatic defrosting) or manually when necessary. Never attempt to remove frost with sharp objects as this may damage the evaporator and impair efficient appliance operation. Let the frost thaw naturally; never use hot water.
- Never put sparkling drinks or bottles of water in the low temperature compartments (freezer/cooler) as they can explode.
- We strongly advise against putting hot liquids or food in the refrigerator or filling lidded containers to the maximum capacity.
- Never carry out any modifications to your appliance.
- Never attempt to repair the appliance alone. Repairs carried out by unqualified persons can cause serious damage; always contact your nearest Service Centre and use original spare parts only.
- The refrigerant and insulation in this appliance do not contain any gases harmful to the ozone or which contribute to the greenhouse effect. However, disposal must be carried out in compliance with the relative standards regarding protection of the environment (see page 2).
- Units may be supplied with R134a refrigerant or with ISOBUTANE (R600a). In any case the label inside the unit shows the type of refrigerant used. All units must be transported and installed with the utmost care

since any excessive knocking or shaking could damage the refrigerating circuit.

- Failure to comply with the above mentioned requirement may result in the unit not being able to function either with R134a or R600a. Furthermore, **in the presence of R600a, any damage to the refrigerating circuit could lead to the risk of explosion caused by outside sparks or flames.**  
**In the event of damage, contact the nearest Service Centre, ventilate the room where**

**the machine is located and avoid exposure to flames or any repair work on the unit.**  
**Caution - Do not use electrical equipment inside the food storage compartment.**

- The side panels and door on the appliance are protected by a transparent polythene film. This film must be removed prior to installation. The film guarantees the finished surfaces of the appliance remain intact prevents scratches or other damage during transport. Simply remove by hand and dispose of as recyclable plastic material.

## INSTALLATION

### Positioning

Position the appliance away from sources of heat such as stoves, radiators, direct sunlight etc. Maximum performance and safety are guaranteed by maintaining the correct room temperatures for the class of unit concerned, as specified on the rating plate.

Category	Ambient Temperature
SN	From +10°C to +32°C
N	From +16°C to +32°C
ST	From +18°C to +38°C
T	From +18°C to +43°C

Appliances must not be exposed to rain. Sufficient air must be allowed to circulate in the lower rear section of appliances, as poor air circulation can affect performance. Built-in appliances should be positioned away from heat sources such as heaters and radiators and out of direct sunlight.

### Electrical connection

Before connecting the appliance to the power supply, ensure that the voltage and frequency as indicated on the dataplate correspond to those of the electrical mains.

A deviation of - 6°C to + 6°C is admissible with respect to the rated voltage. For operation with other voltage supplies, an adequately powered auto-transformer is required.

**Always connect the appliance to an efficient earthing system.**

For the above, if the mains supply is not earthed, connect the appliance to a separate earthing system. Consult a specialised technician to carry out the latter in compliance with current standards. The manufacturer declines all responsibility for failure to observe the above accident prevention standards. This appliance complies with the following EC directives:

B.T. 73/23/CEE  
93/68/CEE

### Cleaning the interior prior to use

Prior to use, clean all internal parts with warm water and neutral detergent to remove the "new" odour and dry thoroughly. Never use abrasive detergents and/or powders which can damage the finish.

**For installation instructions, see rear of manual.**



# OPERATION AND FUNCTIONS

## Operation - Temperature regulation

To switch on the appliance, turn the thermostat knob clockwise from "●" (stop) to the required cooling temperature:

- low numbers = less cool
- high numbers = cooler

Freezers can be fitted with indicator lights as follows: orange light for continuous functioning, green light for normal functioning, red alarm light when the temperature is too high. The internal appliance temperature remains constant automatically. An intermediate thermostat setting is generally recommended.

- At higher thermostat settings with high ambient temperatures and a large amount of stored food, operation may be continuous with the formation of frost or ice on the cooler walls.
- In this case, position the thermostat knob at a lower setting, on some models defrosting is automatic while models with an ice cube compartment or with the (\*\*) - (\*\*\*) - (\* \*\*\*) symbols and freezers have to be manually defrosted (see instructions). This will ensure correct functioning of the appliance and also save on your electricity bill.

## Storing food and drink

For optimal use of the refrigerator compartment observe the following instructions:

- Never put hot liquids or food in the refrigerator while evaporating;
- Cover or wrap food prior to storage (food containing spices in particular);
- Arrange food so that air can circulate freely inside the compartment.

**Meat** (all types): wrap in protective material and store up to 1-2 days maximum.

**Cooked food, cold meals etc.** must be covered well and stored in any position in the

refrigerator.

**Fruit and vegetables** should be cleaned and stored in the relative drawer.

Bananas, potatoes, onions and garlic **should not be stored** in the refrigerator unless prewrapped.

## Food shelves

The walls of the cold storage area are equipped with guides to enable insertion of the grids or shelves in various positions as required.

## Positioning inner door trays

Inner door trays can be inserted in various positions. To change the position proceed as follows:

Pull the tray up out of its seat and refit in the new position.

The upper tray can be removed to ensure thorough cleaning when required.

## Storing frozen food/freezing fresh food

Appliances with compartments with the (\*\*) symbol can be used to store frozen food for a maximum time of one month. Appliances with the (\*\*\*) symbol are suitable for storing frozen food but not for freezing fresh food, while appliances with the (\* \*\*\*) symbol are suitable for both uses.

- To store frozen food, ensure that it has previously been stored correctly by the retailer.
- The interval between purchase and placing the food in the freezer should be the minimum possible.
- Never exceed the storage period indicated on the food packaging.
- Only open the freezer door when necessary and as briefly as possible.

**In the event of operation after prolonged periods of disuse, switch on the appliance under no-load conditions for 2-3 hours taking care to set the thermostat knob to the highest setting, then place food in the refrigerator as required and adjust the thermostat knob to**

**an intermediate setting.**

**Appliances with compartments which have no symbol, are UNSUITABLE for freezing fresh foods and for storing frozen foods.**

## IMPORTANT

- If food stored in the freezer compartment is unintentionally defrosted or partially defrosted e.g. due to a power failure, it should be consumed within a short interval. The food may also be refrozen after being cooked (✖ \*\*\*\* appliance).
- Brief interruptions (up to 6-8 hours) do not affect frozen food.

### Ice

The appliance is supplied with an ice tray. Fill with drinking water and place in the freezer. Never use metal and/or sharp objects to detach the tray from the compartment.

### Defrosting food

For optimal cooking results with frozen food, we recommend defrosting in the refrigerator or at ambient temperature, the latter obviously requiring less time.

If you need to save time and cook food in the shortest time possible, small items can be cooked directly from frozen by lengthening the cooking time slightly. Normal sized items can be defrosted in a microwave oven.

Follow manufacturer's guidelines for further information.

### Freezing fresh food

If the quantity of fresh food does not exceed 1-2 kg no adjustment to the thermostat knob is necessary. To freeze larger quantities use the switch on the control panel: an orange light (continuous function) will come on and after 24 hours you can put the food in to freeze. After another 24 hours put the switch back on the normal position (orange light off and green light on).

During this time the red temperature alarm light might turn on; it will turn off automatically when the fresh food starts to get very cold.

When the red light turns off this does not mean that the food is frozen.

### Tips for optimal freezing

- Put food to be frozen in the top drawer (the coolest area of the freezer).
- The dataplate specifies the maximum quantity of fresh food that can be frozen in 24 hours. Quantities exceeding this amount will result in unsatisfactory freezing and food quality.
- Ensure that food to be frozen is optimal quality and clean and dry thoroughly before placing in the freezer.
- To enable reduced defrosting times and enable freezing of smaller items divide the food into small portions wrapped in suitable protective material (foil or freezer bags). The wrapping must not let out air or humidity to prevent food from drying and loss of vitamins. Bags and/or foil must be pliable to adapt correctly to the food.
- We recommend marking each item or on specific labels the date of freezing and the expiry date.
- You will find a diagram depicting animals and food on the freezer counter-doors, indicating for how many months it is possible to keep them in the freezer. This is only applicable if freezing was done properly and the food was fresh.
- Never place liquids and/or sparkling drinks in hermetically sealed containers in the freezer compartment as they can explode.

### Defrosting the appliance

Frost on the inner cooling walls of the refrigerator is eliminated automatically every time the motor compressor is shut down. Water from melted frost is collected by means of a channel which leads to a tray installed above the motor compressor at the rear of the unit. Heat generated by the motor compressor ensures evaporation of the water.

If the above does not occur, set the thermostat to a lower setting.

**Periodically clean the defrost water drain outlet (at the centre of the tray) in the refrigerator compartment.**

Frost should be removed from the **\*\*\*\*** freezer compartment once it reaches a thickness of over 3-4 mm. If, on the other hand, a layer of ice has formed then defrost it completely following the freezer defrost instructions.

Never use metal objects or anything that is pointed to remove the ice as it could damage the appliance irreparably.

### **\*\*\* / \*\*\*\* Freezer defrosting**

- 24 hours before defrosting, turn the thermostat knob to the maximum setting on the **\*\*\*** appliance and turn on the continuous mode switch (orange indicator light) on the **\*\*\*\*** appliance. This ensures sufficient cooling of food and preparation to empty the compartment.
- Remove the frozen items (food in the refrigerator compartment of the **\*\*\*\*** appliance must also be removed) and store in a cool and dry place to prevent rapid defrosting.
- Disconnect the power supply and set the thermostat knob to "●"
- Leave the appliance door ajar, the freezer has a channel through which the melted ice will drip into a container (of any kind). Appliances with an internal compartment have a shelf that separates the compartment from the rest of the refrigerator; this shelf has a hole through which the water can drip into a container that you must put underneath. Once it has defrosted completely, clean it thoroughly and then put the shelf back in place.
- On completion of defrosting, clean the appliance interior with warm water and a little vinegar and dry thoroughly. Reconnect the appliance to the power supply and set the thermostat knob to maximum. Put the food back into the freezer and after two or three hours reposition the thermostat knob at the normal setting.

### **Refrigerator lamp**

- The central section of the thermostat box is fitted with a lamp for internal lighting. If replacement is required, disconnect the

appliance from the power supply, remove the protection grille from the thermostat unit and unscrew the lamp. Replace with a version with the same voltage, refit the grille on the thermostat unit and connect up to the power supply.

### **Periods of disuse**

- In the event of prolonged periods of disuse, clean thoroughly after emptying, disconnect the appliance from the power supply and leave the door ajar to avoid the formation of unpleasant odours.

## **TROUBLESHOOTING**

Defective operation of the appliance is not always due to a technical fault but is often caused by incorrect installation or use. To avoid unnecessary technical assistance and relative expenses we recommend the following procedures.

### **1.Internal temperature is not sufficiently cool.**

Check:

- that the door closes properly;
- that the thermostat setting is correct;
- that the refrigerator is not positioned close to heat sources;
- that air can circulate freely at the rear of the appliance
- that the freezer door is closed properly;
- that ice in the freezer does not exceed specifications.
- that the condenser is clean.

### **2.Internal temperature is too low**

Check:

- that the thermostat setting is correct.

### **3.Excessive appliance noise level**

Check:

- that the appliance is levelled correctly.

#### 4. Appliance operation failure

Check:

- that the thermostat is not set to "●";
- the green indicator light is on (when fitted)
- that the power supply is not disconnected;
- that the plug is inserted correctly into the mains socket;
- that the automatic cut-out on the mains line has not tripped or that a fuse has blown;
- that the power cable is not faulty.

#### 5. Internal lamp does not work

Check:

- that the appliance is switched on. Otherwise disconnect the plug from the mains socket, remove the protection grille from the thermostat unit and check that the light is tightened correctly. Replace any defective light bulbs with a new 15W bulb that has the same voltage as that indicated on the dataplate inside the unit.

#### 6. Presence of water at the base of the refrigerator

Check:

- that the water drain outlet at the rear is not obstructed. Clean if necessary.

#### NOTE

Should the power cable need to be replaced, remove the plug from the power socket and contact the manufacturer approved service agent to source a new cable. It is recommended that the new cable be installed by a qualified technician.

If problems persist following the above procedures, contact your nearest Technical Assistance department as indicated on the guarantee. Specify the nature of the fault, appliance model and serial number.

## HOW TO DISPOSE OF THE PACKING MATERIAL

#### The packing material is recyclable.

The following procedure is recommended:

- dispose of paper, card and carton in the relative containers;
- dispose of plastic in the relative containers.
- If you have no recycling bins in your area then you can put this material in the ordinary bins and/or take it to the appropriate collection centres.


#### Identifying different types of plastic

To facilitate the recycling of plastics you will find symbols identifying the type of material used to make a particular item.


Identification examples:

- PS: Polystyrene, which can also be the foamed type (normally used for packing)
- PE: Polyethylene
- PP: Polypropylene
- ABS
- SAN

A

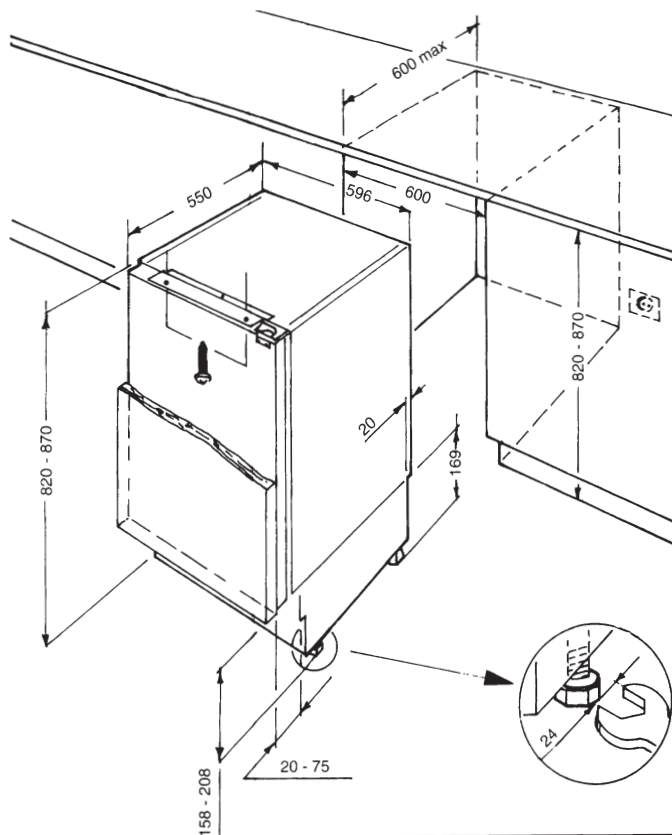

A1

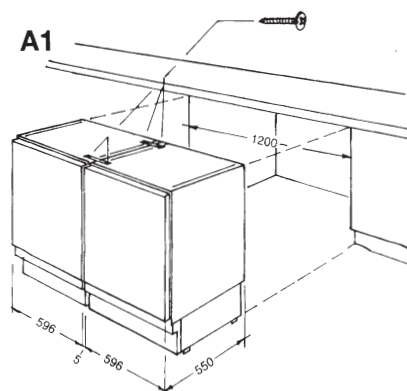

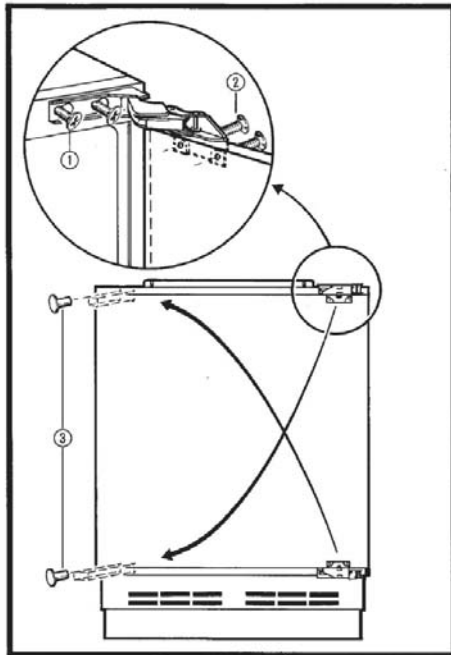


Fig. B

### Reversing The Door Swing

Should you wish to reverse the direction in which the door opens (i.e.; from left to right or right to left) please follow the instructions detailed below. Never attempt to reverse the door opening by turning the door upside down. The existing / new hinges (depending on model) must always be moved to the opposite side of the door as shown above. The door should always remain the correct way up.

- Slacken the retaining screws (1) on the appliance
- Remove the appliance door
- Lever off the cover caps (3) with a knife blade
- Insert retaining screws (1) on the opposite side as shown above (screw in so as to secure but do not tighten)
- Remove the door retaining screws (2) and relocate the hinges as shown above
- Locate the door in the previously inserted screws and tighten
- Insert cover caps (3) into the exposed holes where the hinges were previously located.

Please note: When reversing the door of the appliance, the door seal on the side of the existing hinges may have become compressed over time. If this is the case, the seal may not make good contact with the cabinet when the door is closed. To revert the seal back to its original form, simply heat the seal with a hairdryer for no more than 1 minute. Always ensure the hairdryer is at least 20cm away from the door seal and allow the seal to cool for a minimum of 2 minutes before closing the door.

# Installing the decor door panel

The mounting bracket, adjusting pins and cover trim which are required to install the décor door are fitted to the outside of the appliance door during transportation (see Figure A). To remove these parts:

- Open the appliance door
- Remove the cover trim by levering it out with a screw driver as shown in Figure E.
- Remove locking nut 3 (see Fig C) to enable the mounting bracket to be removed.

To install the décor door:

- Screw the mounting bracket (1) onto the rear of the décor door panel with the screws provided, observing the measurements shown in Fig B. The 15mm gap will provide a 5mm clearance between the underside of the worktop and the top of the décor door panel.
- Screw the two adjusting pins (2) fully into the appliance door.
- Position the décor door on the appliance door and hook the mounting plate over the adjusting pins
- Loosely secure in position using locking nut 3 (Fig C).
- Unscrew the adjusting pins to leave a gap of approximately 9mm as shown in Fig C.

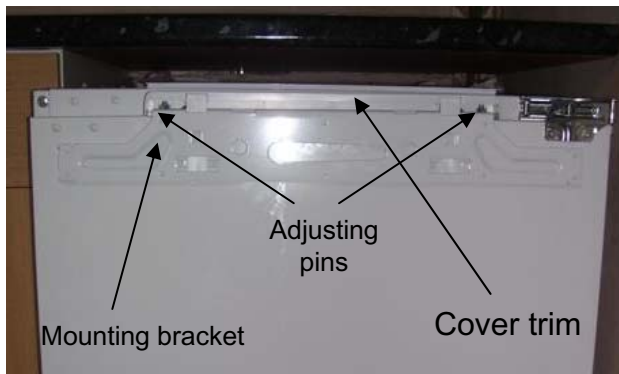


Fig A

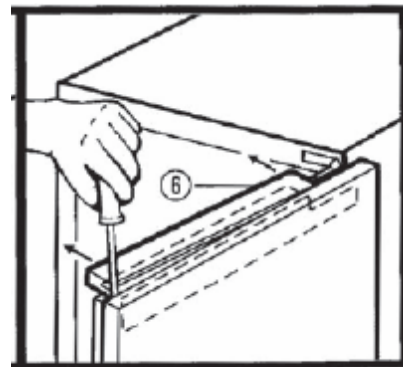


Fig. E

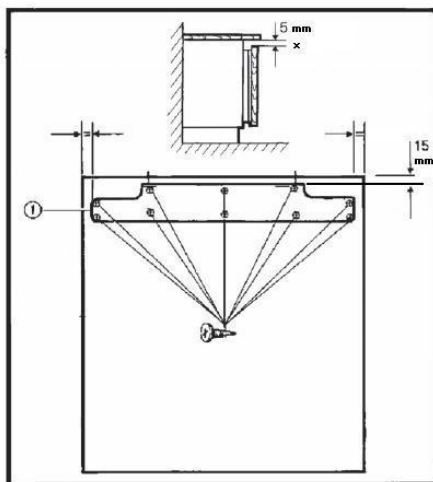


Fig B

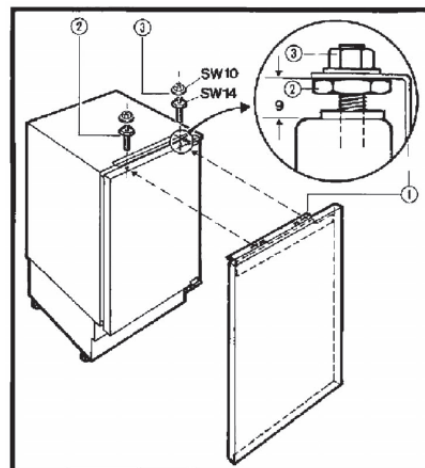


Fig C

## Installing under the worktop

- The appliance can be installed into a niche with a height between 820-870mm. The height of the appliance can be increased by adjusting the feet using a 30mm open-ended spanner as shown in Figure D.
- 820mm high opening – Locate the appliance into position and level accordingly.
- 870mm high opening – Increase the height of the feet by approximately 50mm. Locate the appliance in position and level accordingly.
- Once in position, ensure the décor door panel lies flush with the adjacent cabinetry then fix the appliance to the underside of the worktop by means of the stability bracket (4) (See Fig D2).

## Adjusting the plinth depth

Using the appliance's plinth:

- Open the appliance door.
- Grip the appliance's plinth and pull forwards until it is aligned with the plinth of the adjacent cabinetry.

Using a continuous plinth:

- Open the appliance door
- Grip the appliance's plinth and pull forwards until aligned with the rear of the continuous plinth.
- Cut away the continuous plinth as shown in Figure D, ensuring the ventilation slots are not blocked.

- In both cases, secure the plinth in position by turning the screws (6) clockwise until considerable resistance is felt, as shown in Figure D1.

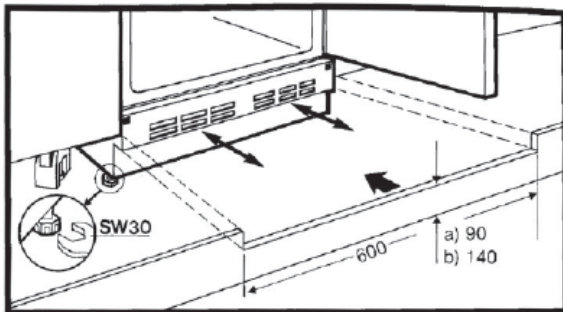


Fig. D

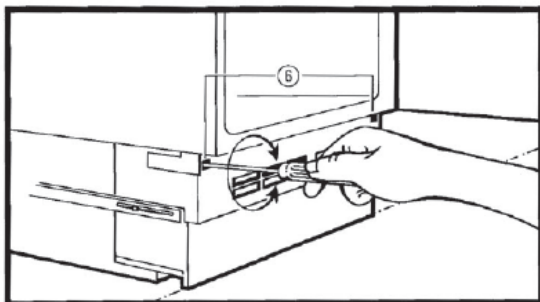


Fig. D1

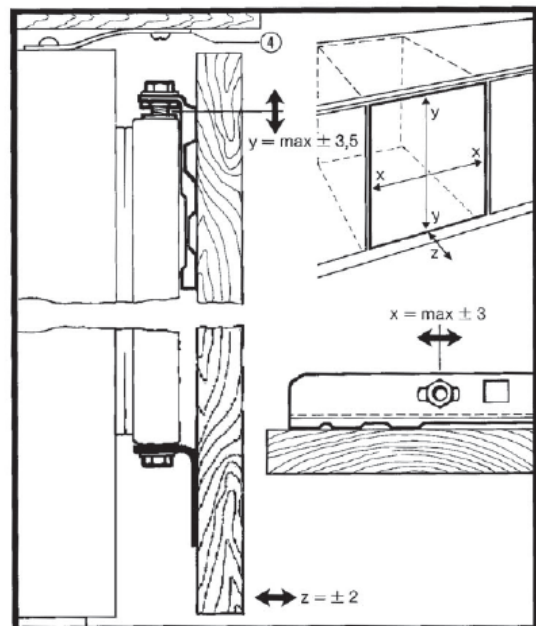


Fig. D2




## Final adjustments to the décor door panel

Once the appliance is in its final location, it may be necessary to make some minor adjustments to the décor door to ensure correct alignment.

If necessary:

- Loosen the locking nuts
- Adjust the height of the adjusting pins Y as required to a maximum of + or – 3.5mm as shown in Figure D2 overleaf.
- Adjust the side measurement X by means of the slots in the mounting bracket as shown in Figure D2 to a maximum of + or – 3mm
- Unscrew the adjusting pins until contact is made with the mounting plate then secure in position with the locking nuts.
- Once final adjustments have been made, take the 2 “L” shaped brackets supplied with the fixing kit and locate loosely in the pre-drilled holes on the underside of the appliance door (as shown in Figure D2).
- Secure in position on the décor door using 4 screws.
- Re-position and tighten the screws on the underside of the appliance door.

**IMPORTANT** – Once installation is complete re-fit the cover trim as shown in Figure D3 as this turns the light off when the appliance door is closed.

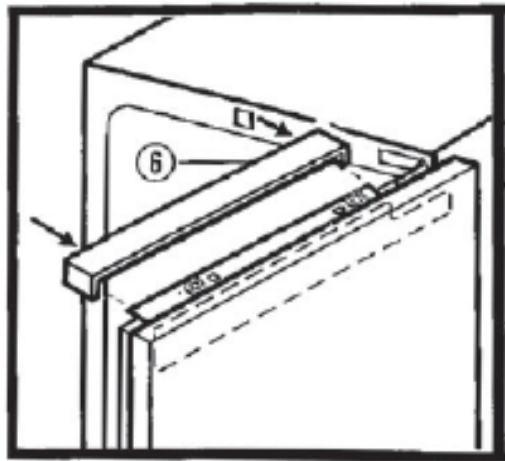

**Fig. D3**